

Sektionshöhenaufteilung iso20/iso45

BRH	Bodensektion	Schloßsektion	Mittelsektion 1	Mittelsektion 2	Mittelsektion 3	Kopfsektion	ISO 20	ISO 45
1750	450	450	450			450		
1775	450	450	450			450		
1800	450	450	450			450		
1825	450	450	450			450		
1850	500	450	450			450		
1875	500	450	450			450		
1900	500	500	450			450		
1925	500	500	450			450		
1950	500	500	500			450		
1975	500	500	500			450		
2000	500	500	500			500		
2025	500	500	500			500		
2050	525	525	500			500		
2075	525	525	500			500		
2100	525	525	525			525		
2125	525	525	525			525		
2150	450	450	450	450		350		
2175	450	450	450	450		375		
2200	450	450	450	450		400		
2225	450	450	450	450		425		
2250	450	450	450	450		450		
2275	450	450	450	450		450		
2300	500	450	450	450		450		
2325	500	450	450	450		450		
2350	500	500	450	450		450		
2375	500	500	450	450		450		
2400	500	500	500	450		450		
2425	500	500	500	450		450		
2450	500	500	500	500		450		
2475	500	500	500	500		450		
2500	500	500	500	500		500		
2525	500	500	500	500		500		
2550	525	525	500	500		500		
2575	525	525	500	500		500		
2600	525	525	525	525		500		
2625	525	525	525	525		525		
2650	525	525	525	525		525		
2675	450	450	450	450	450	450		
2700	450	450	450	450	450	450		
2725	450	450	450	450	450	450		
2750	500	450	450	450	450	450		
2775	500	450	450	450	450	450		
2800	500	500	450	450	450	450		
2825	500	500	450	450	450	450		
2850	500	500	500	450	450	450		
2875	500	500	500	450	450	450		
2900	500	500	500	500	450	450		
2925	500	500	500	500	450	450		
2950	500	500	500	500	500	450		
2975	500	500	500	500	500	450		
3000	500	500	500	500	500	500		
3025	500	500	500	500	500	500		
3050	525	525	500	500	500	500		
3075	525	525	500	500	500	500		
3100	525	525	525	525	500	500		
3125	525	525	525	525	500	500		